



PowerWalker VI 500-1500 THID Quick Guide

I. Front Panel:

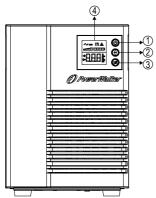


- 1. ON/OFF button
- 2. Scroll down button
- 3. Mute button
- 4. LCD display

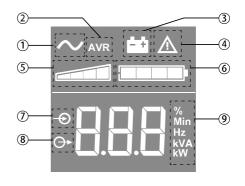


- 1. UPS ON
- 2. AVR mode
- 3. Battery mode
- 4. Internal fault
- 5. Output load level
- 6. Battery level
- 7. Input measurements
- 8. Output measurements
- 9. Measuring unit

II. Rear Panel:

VI 500T/750T

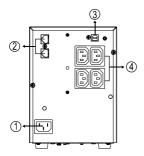

VI 1000T/1500T

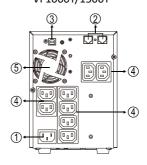




- 1. AC input
- 2. RJ11/RJ45 LAN/Modem/phone line protection
- 3. USB port
- 4. IEC outlet
- 5. Fan

III. UPS setting through the LCD:

Hold scroll down button to select menu

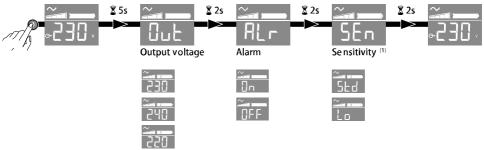

Select value and wait 10s until it saves the setting and returns to main screen. LCD will shut off if there is no activity for 3 minutes.

In low sensitivity mode (Sen: Lo) UPS will tolerate more fluctuations in power and will go on battery power less often. If the connected load is sensitive to power disturbances, keep the sensitivity as Standard (Std).


IV. Audio Indicator

<u>Audible Alarm</u>	<u>Situation</u>
Sounding every 10 seconds	Battery Mode
Sounding every 3 seconds	Battery Low
Sounding every 3 seconds	Overload
Sounding every 1 seconds	Faulty

V. Battery-module replacement

This operation must be performed when the UPS is switched OFF, and unplugged from AC source.




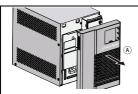


A – Press front panel from the bottom and pull to remove it



B - Disconnect the battery block by separating the two connectors (never pull on the wires).

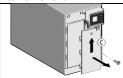

C - Remove the metal protection cover in front of the battery (one screw).

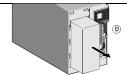

D - Pull the plastic tab to remove the battery block and replace it.

VI. Technical Specification

Model	VI THID Series				
INPUT					
Voltage	220/230/240 VAC				
Voltage Range	184~276 VAC				
ОИТРИТ					
Voltage	220/230/240 VAC				
Voltage Regulation	-10%/+6% of nominal voltage range(Line mode)				
Frequency Range	50/60Hz				
Frequency Regulation	±1Hz (Battery mode)				
Transfer Time	Typical 3-7ms,10ms max				
Waveform	Pure Sine Wave				
PROTECTION					
Full protection	Discharge, overcharge and overload protection				
ENVIRONMENT					
Humidity	0-90 % RH @ 0° to 40° C (non-condensing)				
Monitoring Software	WinPower				

Model	VI 500 THID	VI 750 THID	VI 1000 THID	VI 1500 THID
POWER	500VA / 350W	750VA / 500W	1000VA / 700W	1500VA / 900W
Type & Number	12V/7Ah x1	12V/ 9Ah x1	12V/7Ah x2	12V/9Ah x2
Charging Time	3 hours recover to 90% Power			
Backup Time	10min	9min	11min	8min
(Half SPS load)				



Outlet and Connector	4 * IEC 320 C13 outlets, USB port, RJ11/RJ45 Surge Protection		8 * IEC 320 C13 outlets, USB port, RJ11/RJ45 Surge Protection	
Dimension (WxHxD)	150 mmx 209mm x 240mm		150mm x 209mm x 340mm	
Net weight	6.3kg	6.8kg	10.5kg	11.5kg